


Unpack the machine and check the components

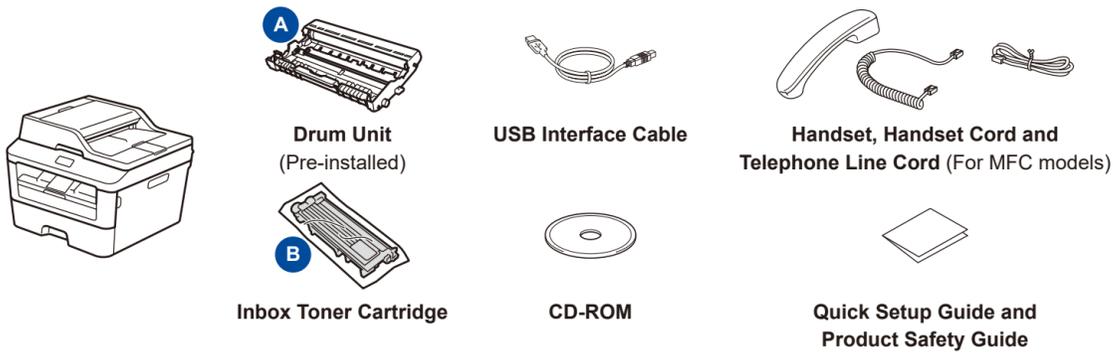

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

NOTE:

- The available connection interfaces vary depending on the model.
- The illustrations in this Quick Setup Guide are based on the MFC-7880DN.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 meters long.


Network cable (DCP-7180DN / MFC-7880DN)

Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


Secure Network Access

Your machine's default password is on the label on the back of the machine (preceded by "Pwd"). We strongly recommend you change it to protect your machine from unauthorised access.


1 Remove the packing materials and install the toner cartridge

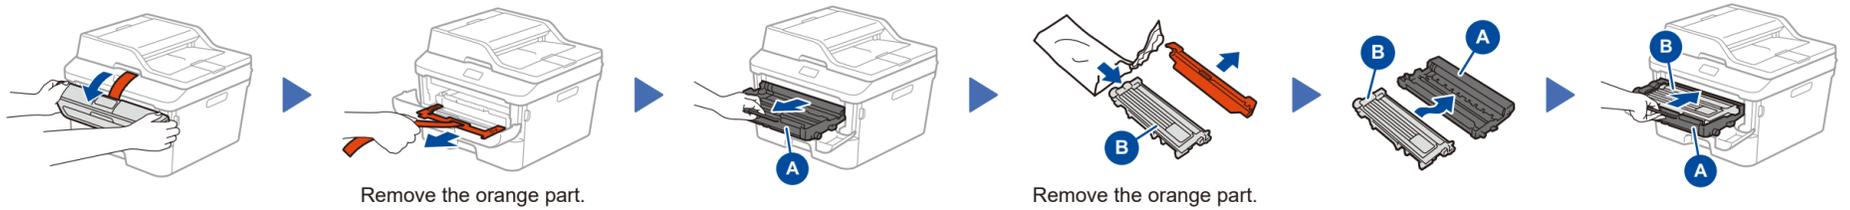

2 Load paper in the paper tray

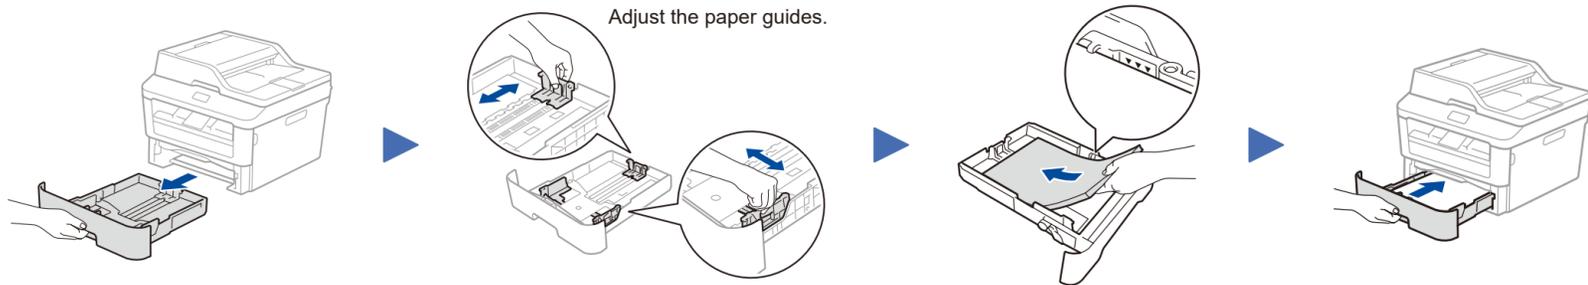


3 Connect the power cord and turn on the machine

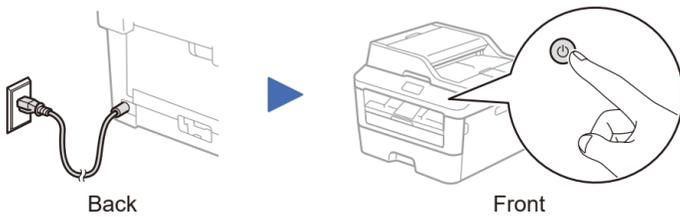

4 Configure the machine for faxing (for MFC models only)

If you do not plan to use the fax feature on this machine, go to step 5.


Connect the telephone line cord

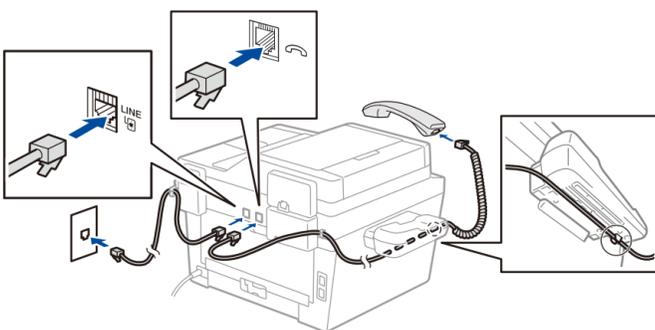

5 Connect the machine to your computer/mobile device


- Windows® PC with a CD-ROM drive, go to step **5A**
- Windows® PC without a CD-ROM drive, go to step **5B**
- Macintosh, go to step **5B**

5A Configuration using the CD-ROM (Windows®)

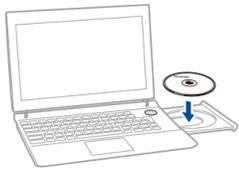

NOTE:

If the Brother screen does not appear automatically, go to **Computer (My Computer)**. (For Windows® 8: click the **File Explorer** icon on the taskbar, and then go to **Computer**.) Double-click the CD-ROM icon, and then double-click **start.exe**.

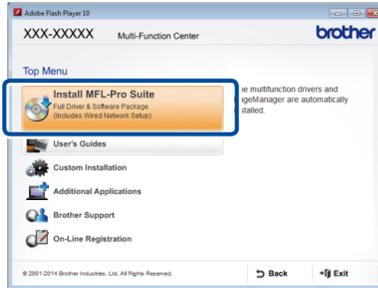


Follow the on-screen instructions to continue installation until either the **Connect the machine** or the **Connection Type** screen appears.

- **Connect the machine:** Follow the on-screen instructions to continue installation.

Finish

- **Connection Type:**

Connection Type

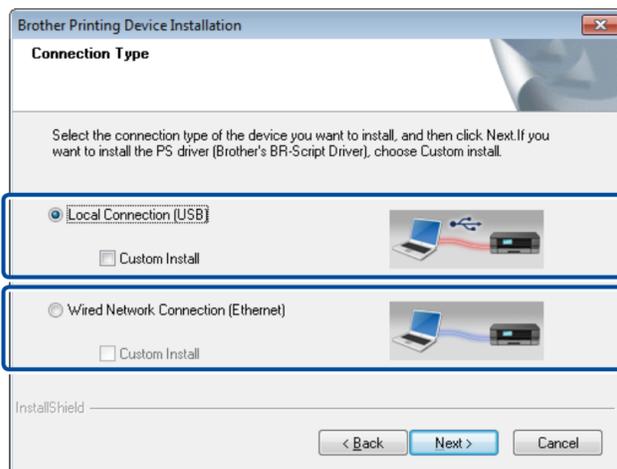

For USB Connection

For Wired Network Connection
Connect a network cable first.

Follow the on-screen instructions to continue installation.

Finish

NOTE:

If connection is unsuccessful, repeat this step.

5B Configuration without using the CD-ROM (Windows® without CD-ROM drive or Macintosh)

Download the full driver and software package from the Brother Solutions Center.

(For Windows®) solutions.brother.com/windows

(For Macintosh) solutions.brother.com/mac

After you download the driver and software package, follow the on-screen instructions until either the **Connect the machine** or the **Connection Type** screen appears. Refer to **5A Configuration using the CD-ROM (Windows®)**.